


# RETROFIT EXISTING 4" PIPES WITH THE POLYLOK EXTEND & LOK

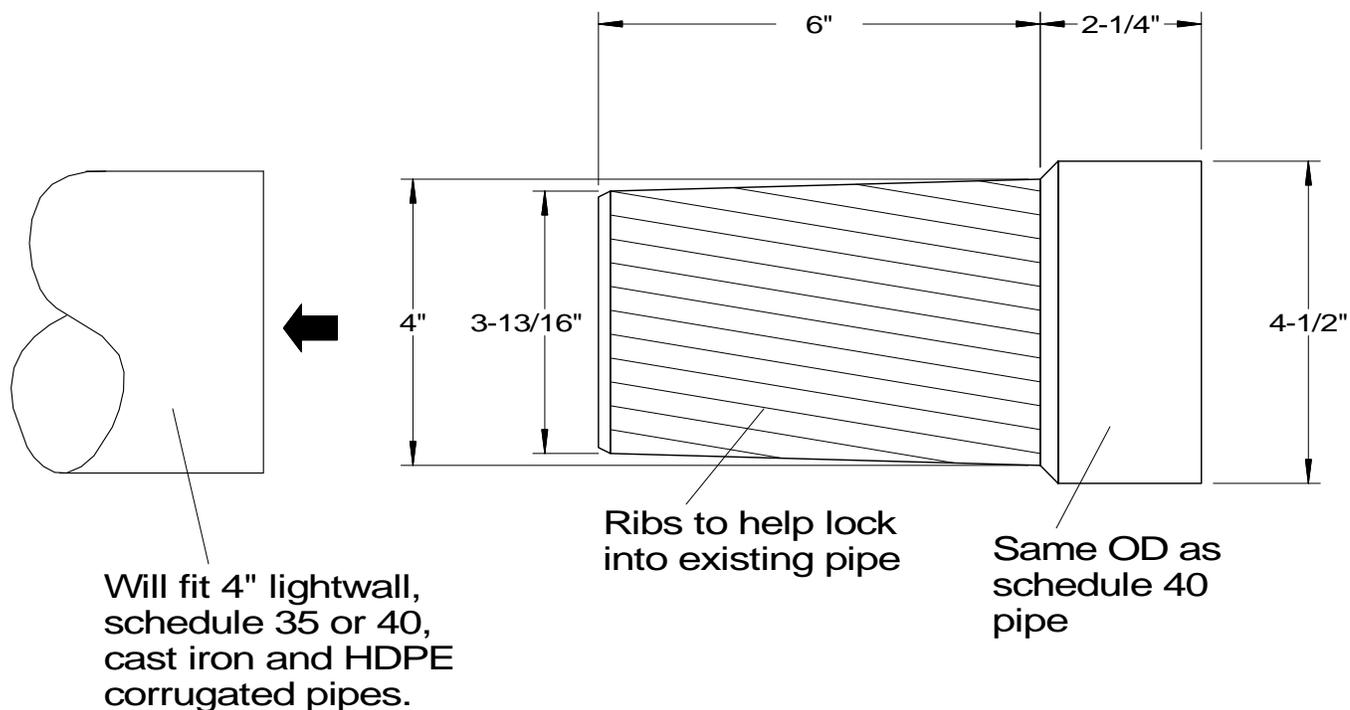

## INSTALLATION INSTRUCTIONS:

1. INSERT SMALL END INTO EXISTING 4" PIPE.
2. USE A HAMMER & WOOD BLOCK OR RUBBER Mallet TO DRIVE FITTING IN UNTIL SECURE.
3. FOR SEPTIC TANK OUTLETS, GLUE ON A 4" SCHEDULE 40 SANITARY TEE WITH PIPE EXTENSION TO MAKE A BAFFLE.

<b>SPECIFICATIONS</b>	<b>4" UNIVERSAL PIPE ADAPTER POLYLOK EXTEND &amp; LOK</b>
Material: PVC Plastic	<b>Woodard's Concrete Products, Inc.</b> 629 Lybolt Road, Bullville, NY 10915 (845) 361-3471 / Fax 361-1050
	9/24/04